

FOLDING REVERSE CLOSURE UMBRELLA WITH LED AND REFLECTIVE STRIP

INSTRUCTION MANUAL

PLEASE READ THE MANUAL BEFORE YOUR FIRST USE. KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!


OPENING AND CLOSING OF THE UMBRELLA

OPENING



To open it, press the large button on the handle.

CLOSING

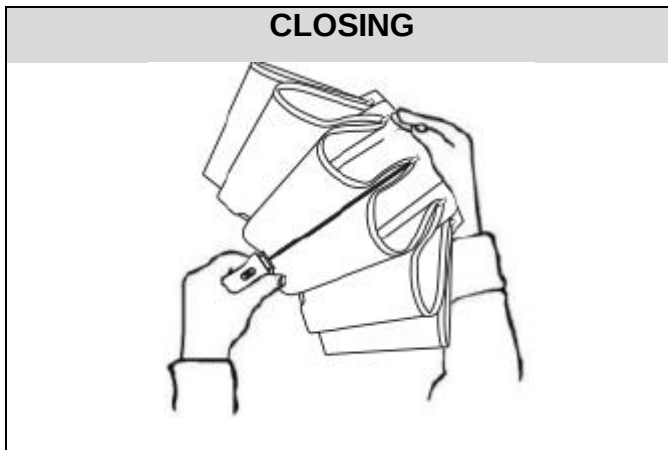


Press the button again to close the umbrella. Then, to fold it completely, press both ends of umbrella until it is locked. See illustration above.

LED TORCH

Before using the torch for the first time, please remove the protective plastic tab located inside the battery compartment. To open the compartment, see step 1 of "REPLACING THE BATTERIES". Then, remove the cover, then the protective plastic tab inside the handle, replace the cover and close it.


Information of the LED: 1 LED of 3V, 0.2W, 30Lm

1

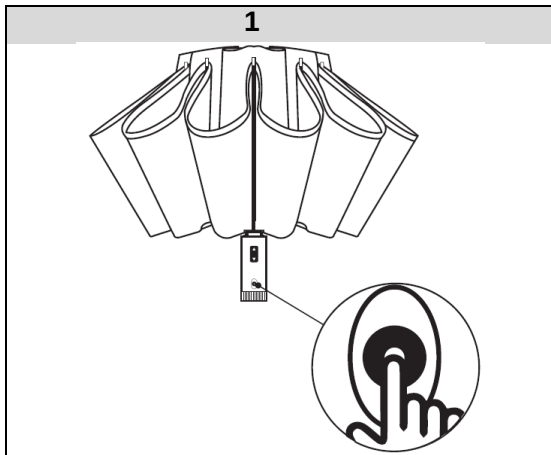

Press the button to turn it on.

2

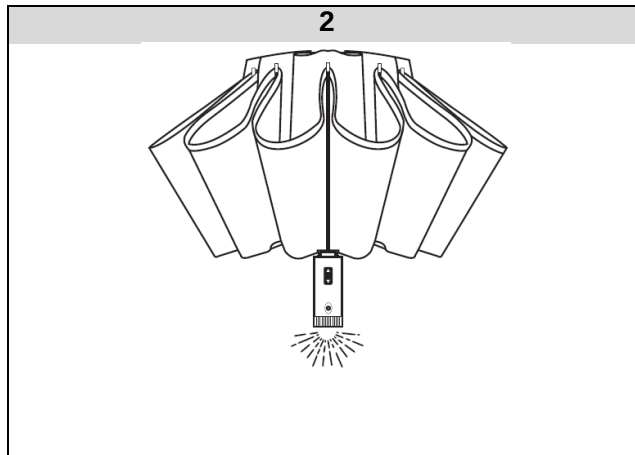


The LED is on.
Press again to turn it off.

REPLACING THE BATTERIES


- Batteries supplied: 3 LR44 bouton cells, 1,5V each, 4,5V

Before any operation of batteries' removal, check that the LED has been turned off.

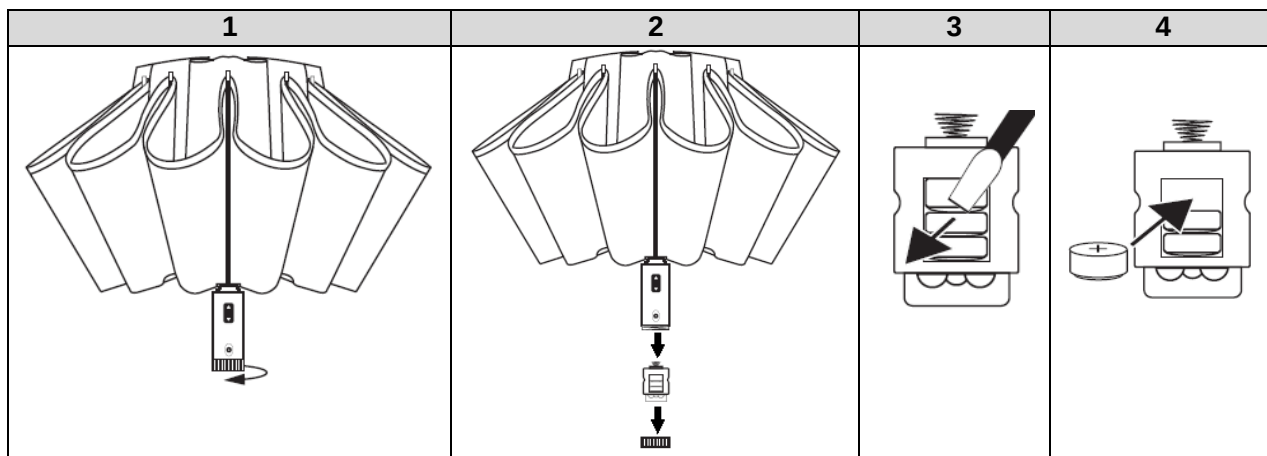

- Unscrew the bottom of the handle.
- Remove the cover, then take out the battery compartment.
- Remove the first battery using the tip of a flathead screwdriver. Then remove the other two batteries.
- Install the 3 new batteries in the battery compartment., making sure to place the + pole upwards.
- Replace the battery compartment to the inside of the handle, in a horizontal position with the LED facing up. When installing, the white button must be in contact with the side plastic connector, located inside the handle.
- Replace the battery compartment cover, then screw it back on.

FUNCTION OF THE REVERSE FOLDING UMBRELLA

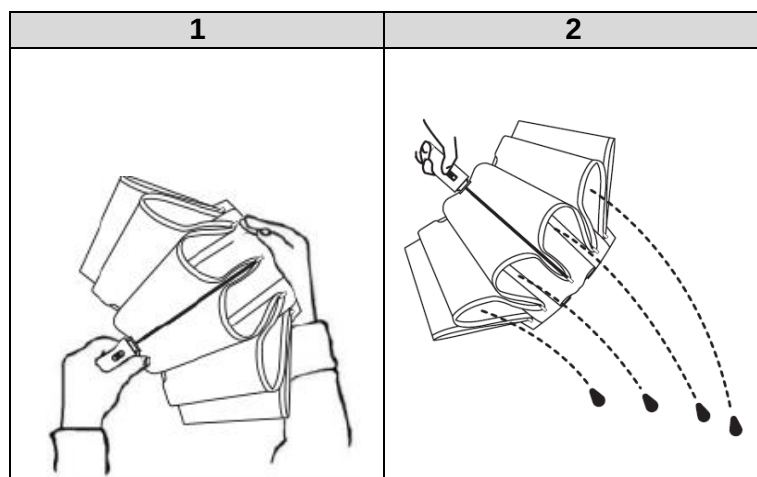

- Thanks to the reverse function, the umbrella canvas traps water inside the umbrella when it closes instead of spilling it on you. Note: To close the umbrella, please follow the procedure indicated at the beginning of the instruction manual.
- Once closed, tilt it to empty it as in illustration No. 2.

Note: The edge of the umbrella canvas is surrounded by a reflective strip, which provides high visibility and safety in low light conditions.

WARNINGS

- DO NOT** use the umbrella for any purpose other than its intended purpose.

- This umbrella opens and closes automatically. When you press the button, let the umbrella open freely. If you try to control it with your hands, you risk damaging the mechanism.
- DO NOT short circuit, modify or puncture the battery pack or the inside of the battery compartment.
- NEVER attempt to disassemble or repair the battery compartment yourself. Take your device to an authorized service center. All repairs must be carried out by a qualified technician.
- LEDS are not replaceable.
- Handle the product with care. A blow, shock or fall, even from a low height, can damage it.

BATTERY WARNINGS

ATTENTION

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.



Imported by EML - Trading name: Prodis, 1 rue de Rome 93110 Rosny-sous-Bois - France/
Made in P.R.C.

Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD, Germany.



PP32E/ HD-3F2204

3 x 1,5V LR44, 4,5V

S/N: PP32E052024000001

Imported by EML – PRODIS 1, rue de Rome
93110 Rosny-sous-Bois -France/ Made in P.R.C.



NEMOTECH