


We would like to thank you for buying our product. Please read the operating instructions carefully before using the product for the first time. If you pass the product on to someone else, you must include these operating instructions.

### Device description

The Arebos DR-298 is an ideal device for caring for your hands, feet and nails. Replaceable, low-wear filing attachments provide perfect care every time. Please read the instructions carefully before using the product. We cannot, as the manufacturer, be held liable in any way for damage to persons or property arising as a result of not following these instructions and the resulting improper use of the device.

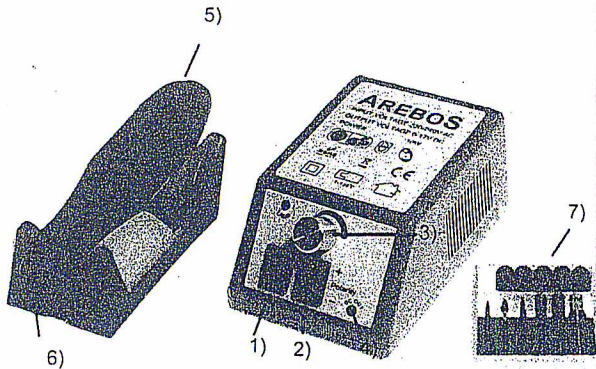

(Image is for illustrative)

- 1) ON / OFF - Switch
- 2) Forward / reverse - switch
- 3) controls for adjusting the speed
- 4) Jack for handpiece
- 5) ON / OFF - Switch for handpiece
- 6) slot for bits
- 7) bits

8

- Do not use aggressive substances such as cream cleaner or other cleaning agents, as these can cause damage to the device's surface.
- Do not attempt to repair the device. It contains no user-serviceable parts.

### Cleaning the grinding heads

Use a brush to clean the grinding heads of dust and skin residues. We also recommend disinfecting the grinding heads using a standard disinfectant spray or 90% alcohol (from a pharmacy) in order to prevent the transmission of infections. Please ensure that the shanks of the grinding heads are kept free of grease; these should be cleaned from time to time.

### Symbole



Totally insulated housing (protection class II).



Safety transformer - short-circuit proof. Output voltage not exceeding 50 volts



Articles may only be used within enclosed buildings.



Article is GS certified (tested safety)



Read the manual

### Safety instructions

- Conscientious supervision is required when the device is being used around children.
- Never place or use the device in a wet or moist environment.
- Do not use the device under water, e.g., in the shower.
- Never allow the device to come into direct contact with fire, gas or oxygen, or with hot objects such as hotplates.
- Switch the device off before changing the grinding head.
- Take all possible precautions to prevent the device falling or being otherwise damaged.
- If problems arise with the device, submit it for repair immediately. Never attempt to repair it yourself.
- Do not lubricate or wash the device.
- When you are not using the device, disconnect the power adapter from the mains.

10

### Usage

Start by shortening and shaping the nails. To avoid developing painful ingrown nails, file your nails straight. Our fine files prevent this ingrowth. To combat calluses, treat the affected areas with the cone attachment. Repeat the procedure regularly, working gently.

Ingrown nails can be gently removed using the cutting attachment. Thick, hardened nails are slowly ground down from the top and filed thinner at the sides.

The grinding heads are available in various shapes and hardnesses and can be reordered at any time.

Before you start using the device, check whether the power-supply voltage shown on the rating plate matches the available power-supply voltage (in Germany: 230 V / 50 Hz).

1. Plug the connection cables for the hand-held part into the socket on the control unit.
2. Plug the power cable into the mains socket.
3. Insert the desired cutter into the cutter head.
4. Using the ON/OFF switch on the control unit, switch the device on; the power status indicator (a green LED) will light.
5. The desired speed can be set using the rotary switch.
6. Using the ON/OFF switch on the control unit, switch on the hand-held device.
7. The optimum speed depends on the hardness of the nails/tips you are working on and the cutter you are using.

### IMPORTANT:

To set your desired direction of rotation for the cutter, adjust the direction of rotation switch accordingly – depending on whether you are working left- or right-handed.

Never change the direction of rotation while the hand-held cutter is turning. First turn the speed down to 0. Then change the direction of rotation. Then turn the device back up to the desired speed. This will extend the device's service life.

### Maintenance and care

#### Cleaning the device

- Regular maintenance and cleaning ensure optimum results and lengthen the device's service life.
- Keep the Arebos DR298 Mercedes 2000 in a safe, cool and dry location when not in use.
- Any extensions, readjustments, modifications or repairs must only be carried out by persons authorized by Canbolat Vertriebs GmbH in order to ensure the device's continued safety, reliability and performance.
- Before cleaning the device, ensure that it is switched off and disconnected from the mains.
- Clean the device with a soft, slightly moistened cloth.

9

### Danger

- Never allow the device to come into direct contact with water or other liquids.
- The device must not be used outdoors.
- Never touch the device with wet hands.
- Only operate the device with the specified power-supply voltage.
- Always unplug the power supply from the mains socket after use and before cleaning.
- If the device falls into water, do not reach in after it! Unplug the power supply from the mains socket first.
- Do not store the device near a washbasin or bath, as there is a danger of the device falling into the washbasin or bath.
- To avoid the risk of injury or of blocking or damaging the device, ensure that the device does not come into contact with clothing, strings, shoelaces, bristles, wires, threads or similar during operation.

### Procedure in the case of a fault

- If a fault, blockage, accident or similar should occur, unplug the power cable from the mains socket immediately and contact our service department on 0931/47 08 8387.

### Warning

- Never leave the device unattended if children or people not trained in handling the device are present.
- Ensure that children do not play with the device.
- Only use the device for the applications described in these operating instructions.
- Only use manufacturer-approved attachments and accessories.
- Never use the device after the power cable has been damaged or the device has been dropped or has come into contact with water.
- This device is not intended for use by persons (including children) with diminished physical, sensory or mental faculties or with a lack of experience and/or lack of knowledge of the device, unless they are supervised by a person responsible for their safety and are given instructions on how to use the device.
- Do not use the device under blankets and pillows, as the excess heat can lead to fire, injuries or electric shock.
- Never carry the device by its cable and do not use the cable as a handle.

11

DE / EN / FR / IT / ES

- When you are finished using the device, set all switches to *Off/0* and unplug the power cable from the mains.
- Only use extension cables if you have first ensured that they are in good condition.
- If the device's power cable has been damaged, it must only be replaced by an authorized service centre.
- Never allow children to play with the packaging. This poses a suffocation risk.

#### Disposal

Electrical tools, accessories and packaging must be recycled in an environmentally friendly manner.

##### For EU countries only



Never dispose of electrical tools as household waste! In accordance with the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment and its implementation into national law, electrical tools that are no longer suitable for use must be sorted separately and recycled in an environmentally friendly manner.

Within the EU, this symbol indicates that this product must not be disposed of as household waste. Waste equipment contains valuable recyclable materials that should be supplied for recycling; this also avoids causing damage to the environment or human health through uncontrolled waste disposal. Please therefore dispose of waste equipment via suitable collection systems or return the device to the place where you bought it for disposal. They will then submit the device for recycling.

##### Accumulators and batteries

Never put accumulators/batteries into household waste, water or fire. Accumulators/batteries should be collected, recycled or disposed of in an environmentally friendly manner.

##### For EU countries only

In accordance with Directive 91/157/EEC, defective or used accumulators/batteries can be submitted directly to Canbolat Vertriebsgesellschaft mbH, Rotkreuzstr. 10, D-97080 Würzburg, Germany

DE / EN / FR / IT / ES

#### Specification of replacement parts to be used

The device is supplied without replacement parts. If replacement parts are required, please contact our service department on 0931/47 08 8387.

#### Technical details

Type of device	Personal-care device for manicure and pedicure
Speed	20,000 revolutions per minute
Power supply	220–240 V / 50 Hz
Rated output voltage	DC 0–17 V
Rated power	0,8A
Output current	ca. 39 dB
Loudness	1,40 kg
Weight	0,8A

#### Transport/storage/operating conditions

Transport	Only transport in original packaging.
Transport and storage temperature:	+5° C to +50° C
Operating temperature	+10° C to +40° C
Atmospheric pressure	700–1060 hPa

Abrupt temperature changes should be avoided because of the risk of condensation forming in the device; do not use the device until the temperature has equalized.