


DISASSEMBLY AND ASSEMBLY

1. Turn the speed control dial to the '0' position.
2. Remove the glass jug from the motor case.
3. Remove the measuring cup from the lid and then remove the lid.
4. Place the glass jug on the motor case and turn the jug until it is positioned securely.
5. Place the lid on the glass jug and place the measuring cup in the lid.

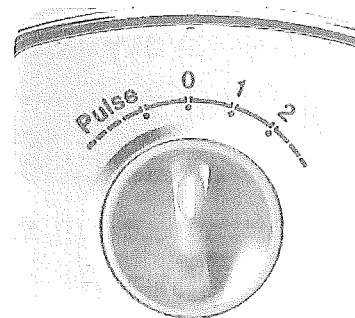

USE

Place the food to be mixed in the glass jug.

Place the lid on the glass jug and place the glass jug on the motor case. Place the measuring cup in the lid.

Turn the speed control dial to the '1' or '2' position.

'1' is for light liquids and '2' for thicker liquids and solid foods.

With the 'Pulse' position you can blend with short, controlled pulses. Turn the dial to the 'Pulse' position and hold down the button. Release the button to proceed to the '0' position.

KNIFE ASSEMBLY

Removal of the knives

REMOVE THE KNIVES ONLY WHEN ABSOLUTELY NECESSARY!

Remove the knives from the jug by turning the bottom part of the jug (threaded ring) in a counterclockwise direction.

Place the whole on a flat surface to facilitate the removal. Place a thick cloth over the knives and pull them out straight.

The knives are very sharp. Be extremely careful when you touch them.

To replace the knives

When you place the threaded ring and the knives on the jug, ensure that the level sides of the knives are placed equally with the level sides of the opening of the jug. Turn the white threaded ring clockwise onto the jug until secure.

IMPORTANT: if the knives are not installed correctly, the appliance will produce more noise.

CLEANING

Jug

Empty the jug and fill it with water. Place the jug on the motor case and turn the dial several times to the 'Pulse' position (hold the dial). Empty the jug and repeat this process until the jug is clean.

Knives

Clean the surface of the knives with clean soapy water. Do not let the knives soak or use scrubbing materials. If necessary, you may use a soft brush to remove any remaining material.

Rinse the knives under streaming water and dry them with a clean cloth.

Do not wash the bottom of the knife component with water or any other liquid.

Do not place the knives in the dishwasher.

IMPORTANT

If you clean the jug without removing the knives, dry them thoroughly or place the jug on its side to dry. Always clean the appliance before using it and always follow instructions as described in this manual.