

LED Motion Sensor Light
Cat. No.: 24984


Instruction

No wiring required.


Screw or stick the product to any flat surface.

1. Remove the screws from the batteries compartment cover and insert 3 AA batteries (not included) as per below illustration:


ON/OFF switch: Press once to turn on; Press twice to activate auto sensor mode- on when dark and senses motion, off when light. Press 3 times to turn off.

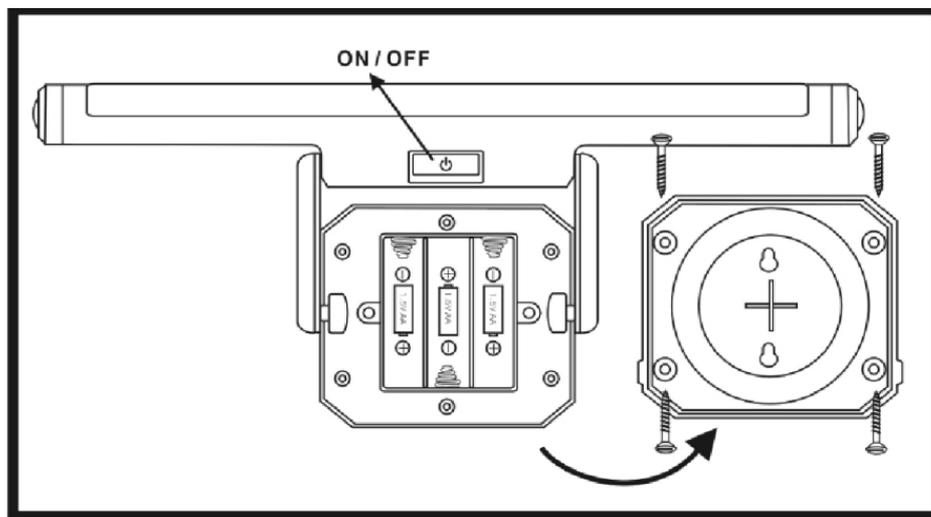

2. For wall mounted, use the provided screws :

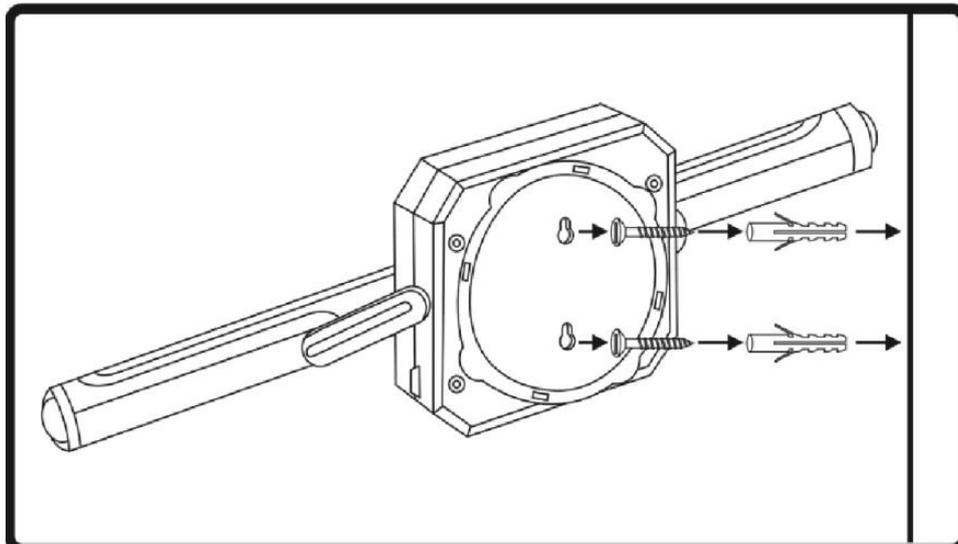

3. Stick the device to a flat surface, use the provided stickers.

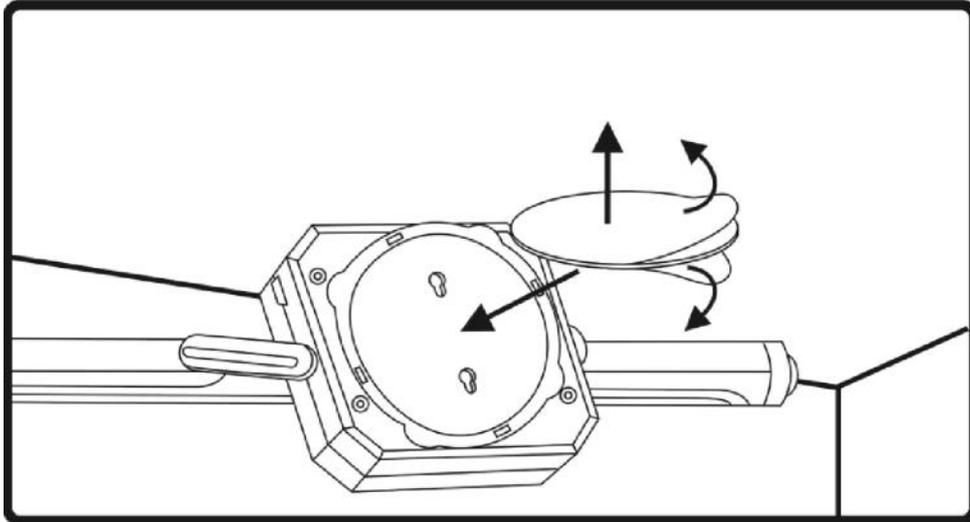

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany	0180 . 530 63 63* or info@eurotops.de
in Austria	01 . 230 60 43 12 or info@eurotops.at
in Switzerland	044 . 28 36 125 or info@eurotops.ch
in the Netherlands	026 . 37 36 333 or info@eurotops.nl
in France	0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 21.08.2014